


# Quick Start Guide: Rolec Securicharge:EV

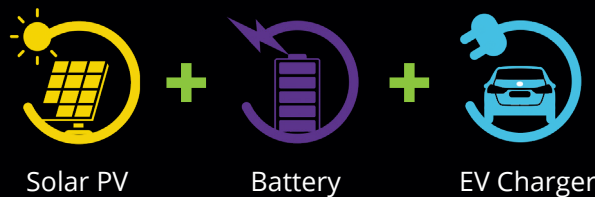

[carcharge.uk](http://carcharge.uk)

## How to Operate - Starting A Charge

- 1** Using the cable supplied by your vehicle manufacturer, plug in you cable at the car end first.
- 2** Plug the other end of the cable into the car charging unit.  
  
If your charging unit is activated by a key, insert the key and turn it to the 'ON' position. If you have a smart charger, start the charger using the app, SSID card, or fob.
- 3** Ensure the status indicator changes to a fixed green light. (See status indicator guide on the last page).
- 4**



## How to Operate - Disconnecting and finishing a charge




**1** Follow your vehicles manufacturer's instructions on finishing a charge first i.e. this could be from an app

**2** Unplug the cable, ensuring you remove the charger end of the cable first, followed by the plug from the vehicle, ensuring the flap over the charge point socket is closed.

**3** If the charger is key operated, turn the key to the off position and then remove the key from the charger.



## Troubleshooting

-  Check the key is in the ON position.
-  Ensure the cable is pushed in fully at both ends.
-  Check the charging status lights (see list below) are GREEN – If they are BLUE follow the steps above.

## LED Status Indicator Guide

Flashing **blue** light - Ready for Charge (IEC socket only).

Fixed **blue** light - Cable plugged in but not charging.

Fixed **green** light - Charging in progress.

Flashing **red** light - Fault indicated.

Switch off unit at source and switch back on after 20 seconds to clear the fault. If the fault persists, contact UK Green Energy Installations.

Ensure the status indicator shows **blue** light.



## General Safety

- ✓ We recommend the units be safety tested every 12 months, by a qualified electrician with readings recorded.
- ✓ Always inspect the lead first for wear and damage. Never plug a damaged lead into the charger.
- ✓ Clean the charger with a lightly damp cloth, do not use any chemicals or abrasive cloths or chemicals.
- ✓ Do not use the charger if the unit looks damaged.